
# **RO-100M Reverse Osmosis Unit**

# **Installation Instructions**



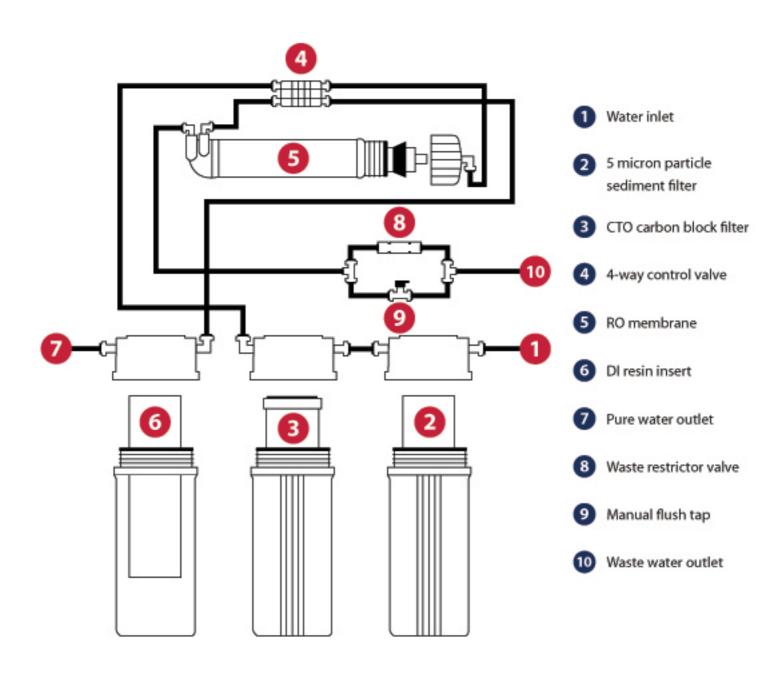

## Installation Instructions

- Remove all contents from the packaging
- 2 Use larger of the 2 white spanners to unscrew the 2 white vertical pre-filter housings. (Parts 2 & 3 on the diagram).
- 3 Remove the pre-filter cartridges from the housings.
- 4 Remove the plastic wrapping from the 2 pre-filters and replace the cartridges back into the housings.
- 5 Then re-install the housings back onto the system using the same spanner (being careful to re-install them in the correct order). (Parts 2 & 3 on the diagram).
- 6 Disconnect the single pipe that enters into the lid of the white horiztional RO membrane housing. (Part 5 on the diagram).
- 7 Unscrew the lid of the RO membrane housing with the included smaller white spanner.
- 8 Remove the blue RO membrane from its wrapper (do not remove any of the blue material from the RO membrane).
- 9 Place a small amount of vaseline on all 3 seals that are installed onto the RO membrane (2 small seals at one end and a larger one at the other end).
- 10 Insert the ro membrane into the RO membrane housing. Ensuring that the end with the 2 small rubber o-rings enter first.
- When the RO membrane has been inserted, use a pair of pliers to grip the plastic central siggot (on the RO membrane) and give it approximately ½ a turn. You should feel the RO membrane "click" into place.
- 12 Then re-install the lid (that was removed in step 7) onto the housing and tighten with the white spanner. (If you find that the RO membrane has to be pushed in with the lid, that is not fully inserted. You would need to remove the RO membrane and repeat steps 10 & 11).
- 13 Do not re-install the pipe that was removed during step 6.
- 14 Use the larger white spanner (that was used in steps 2-5) to undo the clear veritcal housing and remove it from the system (part 6 on the diagram).
- 15 Remove the clear refillable di resin cartridge from the housing.
- 16 Remove the plastic wrapping from the clear refillable di resin cartridge.
- 17 Remove the plastic lid from the clear refillable di resin cartridge.
- 18 This will then expose a plastic gauze underneath, please remove this as well. (if you are having difficulty removing the part, please use a pair of pliers on the plastic nub in the centre of the gauze).
- 19 Remove the top white sponge from the clear refillable DI resin cartridge.



- 20 Carefully open your bag of DI resin and fill the clear DI resin chamber with resin until the resin layer reaches approximately 2cm below the bottom of the 2 indentations (that run around the outside of the clear refillable cartridge).
- 21 Tap the resin down to ensure it is fully compacted.
- 22 Reinstall the top white sponge. The top of this sponge should be level with the bottom of the 2 indentations (that run around the outside of the clear refillbale DI resin cartridge). If the sponge is not level with this point, please repeat steps 20-22.
- 23 Re-install the plastic guaze (with the plastic nub facing upwards) that was removed during step 18.
- 24 Re-install the lid onto the clear refillable DI resin cartridge.
- 25 Install one of the 2 seals (that are located in a zip lock bag within the main box) on top of the existing seal that is on the lid clear refillable di resin cartridge. To confirm you should have 1 thick seal (6mm in thickness) and 1 thin seal (4mm).
- 26 Re-install the clear refillable di resin cartridge into the clear filter housing (that was removed during step 15), ensuring that the lid of the clear refillable di resin cartridge is at the top.
- 27 Re-install the clear filter housing onto the unit using the larger of the 2 white spanners.
- 28 Make the connection to your water supply. (If you wish to use the included mains piercing fitting, please refer to the mains piercing fitting part of the instruction manual).
- 29 If you wish to use the included drain saddle valve, please refer to the drain saddle valve part of the instruction manual. If you do not wish to connect the waste water outlet pipe onto the included drain saddle valve, please ensure that the pipe is installed somewhere where the waste water can drain freely.
- 30 Remove the red plastic stopper and install a piece of pipe joining this fitting to your mains water supply (that was installed in step 28). (Part 1 on the diagram)
- 31 Remove the black plastic stopper and install a piece of pipe joining this to your waste water outlet (as installed in step 29). (Part 10 on the diagram).
- 32 Remove the blue plastic stopper and install a piece of pipe joining this fitting to your pure water outlet/storage. (part 7 on the diagram).
- 33 Place the pipe that is currently removed from the ro membrane housing lid (as removed in step 6) into a bucket or suitable recepticle.
- 34 Turn the water supply to the system on. Water will now exit the pipe.
- 35 Leave the water running until the water has ran clear. Once the water has ran clear, then turn the water supply to the RO unit off.
- 36 Re-install the pipe back into the lid of the RO membrane housing.



- 37 Open the blue handled tap (manual flush valve) on the system (so that it is inline with the pipes entering it). (Part 9 on the diagram).
- 38 Turn the water supply to the system on and leave the system for run for 30 minutes.
- 39 Once 30 minutes has passed, then fully close the manual flush valve (part 9 on the diagram). The unit is then ready to use.
- 40 Do not install the concentrate (waste-water) outlet pipe at a positive incline as this practice commonly clogs the RO membrane.

### How to use a Saddle Drain Valve

#### Important Information

(Please note that this fitting can only be used with pipe that has a diameter of 32-40mm).

We strongly recommend that this is installed above the u-bend (if there is one installed on the pipe that you wish to connect onto).

If you are unable to install the drain saddle valve above the u-bend, it is criticial that you install a none return/one way/check valve on the waste water pipe that enters the drain saddle valve

#### Installation process

- Drill a ¼" hole in the pipe that you wish to connect the valve onto.
- 2 Dissamble the drain saddle valve.
- 3 Remove the strip from the self adhesive tab and place it onto the inside curved edge on the inlet side of the valve (making sure that the hole in the self adhesive tab lines up to the hole on the inside of the valve).
- 4 Line this up to the hole that you have drilled (in step 1). We recommend that you use the drillbit that you used to create the hole to step 1, to hold this part of the valve in place.
- 5 Connect the other part of the drain saddle valve around the pipe (ensure that the 2 nuts are present within ther respective grooves)
- 6 Tighten the 2 parts of the valve together with the 2 included screws.
- 7 The valve will now be fully installed onto the sink/waste pipe.
- 8 Remove the pre-installed ¼" blue locking clip from the valve
- 9 Install the drain outlet pipe from your reverse osmosis system or water filtration system into the valve.
- 10 Once the pipe is fully inserted, replace the ¼" blue locking clip (that was removed in

11 The installation process is now complete.

# How to use a Mains Piercing Fitting

Please note that this fitting can only be used on copper piping. If the pipe that you wish to connect onto is plastic, do not use this fitting.

- Remove all parts from the packaging.
- 2 Remove the curved metal piece from the fitting.
- 3 Loosen the bottom brass bolt (that is attached onto the threaded bar)on the mains piercing fitting.
- 4 Slide the main fitting over your copper pipe and re-install the curved metal piece (that was removed during step 2) so that the copper pipe sits inside of the groove.
- 5 Re-tighten the bottom brass bolt so that it tightens the curved metal piece (that you have just re-installed) onto the copper pipe.
- 6 Remove the brass nut from the fitting.
- 7 Slide the nut over the pipe that you wish to connect onto the fitting.
- 8 Install the pipe olive onto the pipe (that you wish to connect onto the fitting)
- 9 Install the plastic pipe insert into the end of the pipe (that you wish to connect onto the fitting).
- Slide the nut to the end of the pipe and re-install onto the thread that it was originally removed from (in step 6).
- 11 Turn the handle of the valve as far as it will go (the valve has now pierced into the copper piping).
- 12 When you are ready to activate the water supply to your filter/filtration system, simply turn the handle in the opposite direction as far as it will go. This will then activate the water supply.

# Maintenance

We would recommend that the unit is ran with the manual flush valve (part 9 on the diagram) fully open for the first 5-10 minutes of operation. This will help to preserve the lifespan of the RO membrane.

We recommend changing the 2 pre-filters every 6 months or after 16,000 litres of total usage (pure & waste water)

Every time the pre-filters are changed, please follow steps 2-6 and 33-36.

We recommend replacing the ro membrane on average every 12 months.

Every time the ro membrane is changed, please follow steps 6-12 and 36-39.



We recommend replacing the di resin on average every 200-400 litres of pure water produced (the lifespan is dependent on the health of the other consumables and your incoming TDS levels).

Every time the di resin is changed, please follow steps 14-27.

Every time the DI resin on your system is changed, inspect the sponges for any damage or degradation. If the sponges are damaged, then we would recommend replacing them.

